
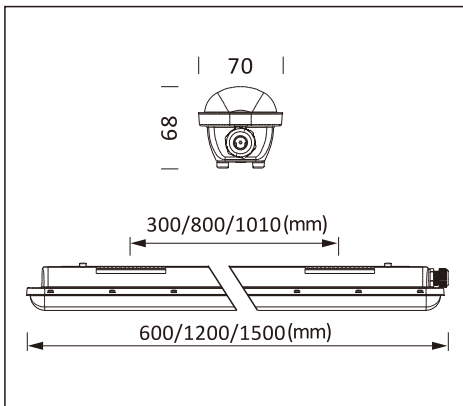


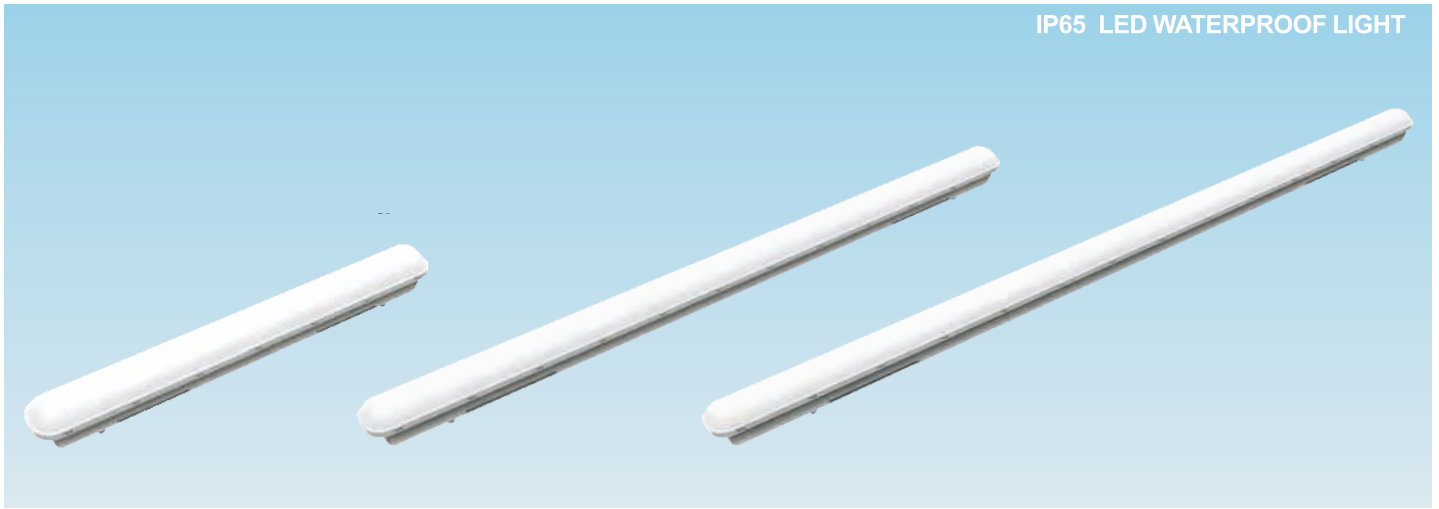


【Key Features】


- PC housing
- PC diffuser
- Fast installation without clips
- LG 2835 LED
- OSRAM LED driver
- 120lm/W
- UV Resistance
- Quick-fix brackets supplied

【Application】

- Garages
- Factories
- Warehouse
- Process areas
- Wine Cellars
- Cheese dairies
- Car parking
- Textile processing plants
- Agricultural buildings
- Plant rooms
- Transport terminals
- Paper processing

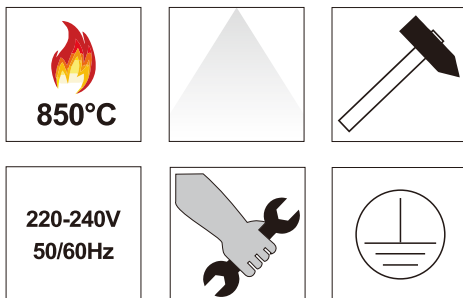


Model No.	SR05-15W-630	SR05-24W-630	SR05-20W-1230	SR05-36W-1230	SR05-30W-1530	SR05-50W-1530
Input Voltage(V)	220-240V	220-240V	220-240V	220-240V	220-240V	220-240V
Frenquency(Hz)	50/60Hz	50/60Hz	50/60Hz	50/60Hz	50/60Hz	50/60Hz
Lumen (120lm/W)	1800lm	2880lm	2400lm	4320lm	3600lm	6000lm
System Power (W)	15W	24W	20W	36W	30W	50W
CCT (K)	2700-6500 K	2700-6500 K	2700-6500 K	2700-6500 K	2700-6500 K	2700-6500 K
CRI	>80	>80	>80	>80	>80	>80
Beam Angel(°)	120	120	120	120	120	120
IP Rate	IP65	IP65	IP65	IP65	IP65	IP65
LED type	SMD2835	SMD2835	SMD2835	SMD2835	SMD2835	SMD2835
Life time	50,000 hours	50,000 hours	50,000 hours	50,000 hours	50,000 hours	50,000 hours
Average ambient temp.	25°C	25°C	25°C	25°C	25°C	25°C
Operating temp range.	-25°C+35°C	-25°C+35°C	-25°C+35°C	-25°C+35°C	-25°C+35°C	-25°C+35°C
Operating Humidity(°C)	10%-90%	10%-90%	10%-90%	10%-90%	10%-90%	10%-90%
Product Size(mm)	600x70x68mm	600x70x68mm	1200x70x68mm	1200x70x68mm	1500x70x68mm	1500x70x68mm
Innerbox Size(mm)	630x77x77mm	630x77x77mm	1230x77x77mm	1230x77x77mm	1530x77x77mm	1530x77x77mm
Carton Size(mm)	645x325x250mm	645x325x250mm	1245x250x250mm	1245x250x250mm	1545x250x250mm	1545x250x250mm
Qty/CTN(pcs)	12	12	9	9	9	9

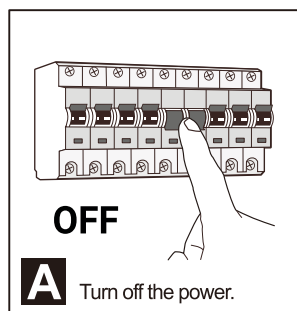

B


① Drill $\varnothing 6\text{mm}$ holes according to below drawing.

Model	Power	Fixing Hole Centre
SR05-15W-630	15W	300mm
SR05-24W-630	24W	300mm
SR05-20W-1230	20W	800mm
SR05-36W-1230	36W	800mm
SR05-30W-1530	30W	1010mm
SR05-50W-1530	50W	1010mm

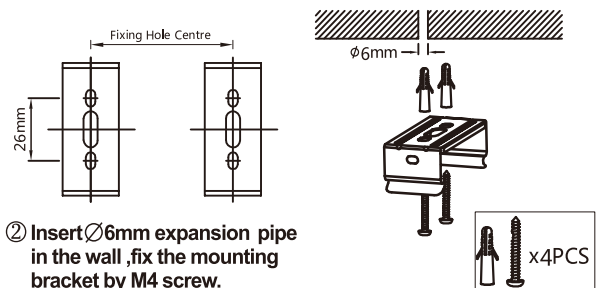


C

Loosen the nut of the cable gland, put the cable through the cable gland.

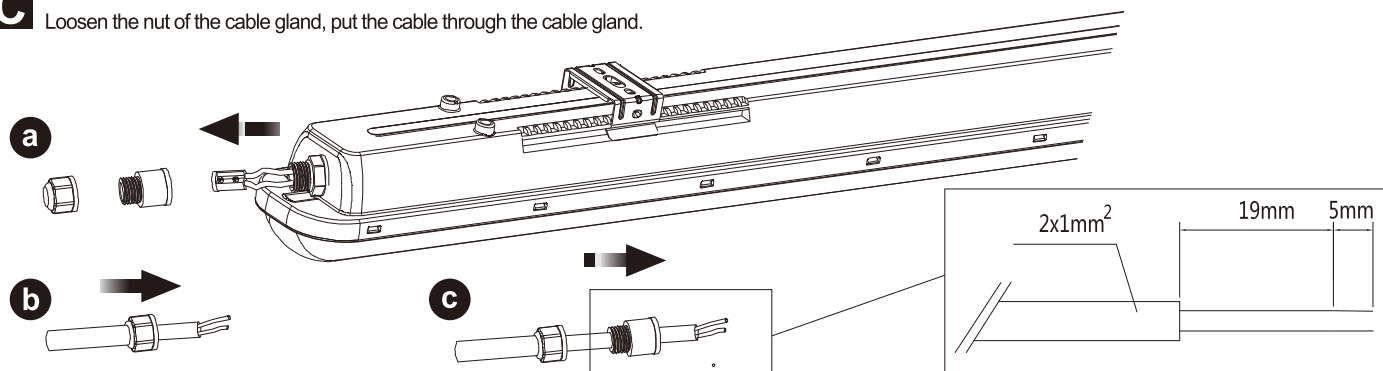


D

Connect the cable on the terminal block as below shown and tighten the cable gland

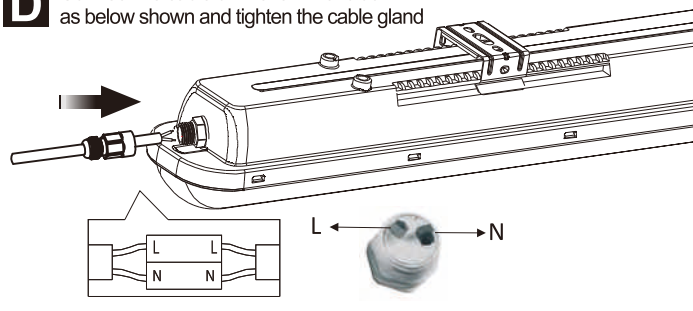


E

Tighten the connector under instruction in turn

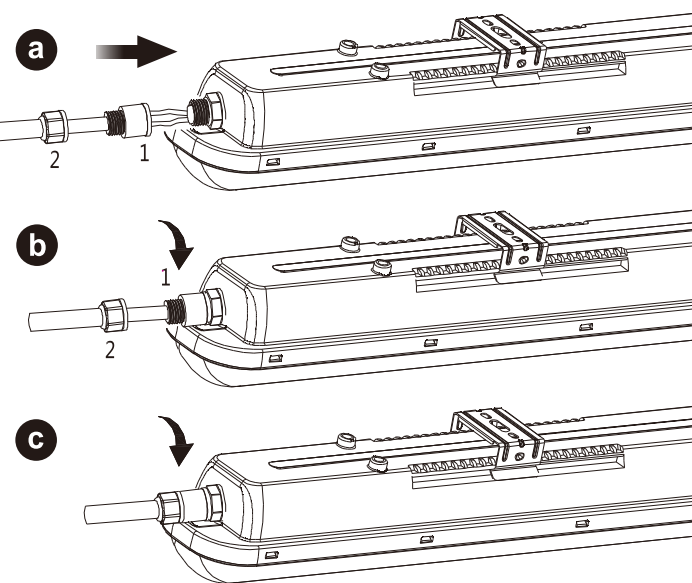


F

Close the diffuser

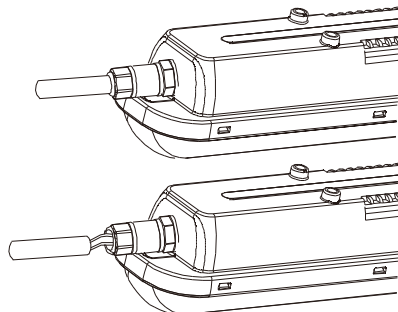


F

Fix the lamp on the wall

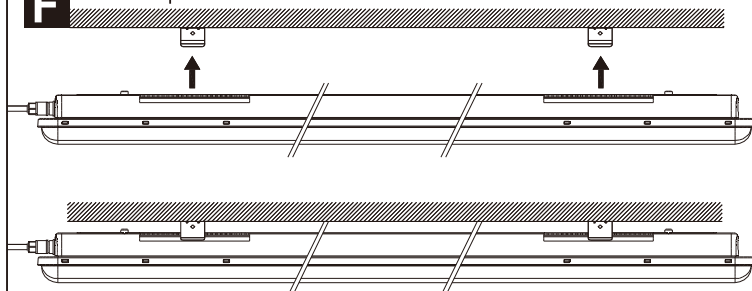

G

Turn on the power.

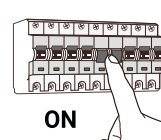

Safety Notice:

1. Electrical installation should be done by registered electrician only
2. Disconnect the luminaire from supply and wait until luminaire is cooled down, before replacement of the driver
3. Never touch the lamp while luminaire is switched on
4. In any case of malfunction disconnect luminaire from supply immediately, don't try to repair the luminaire yourself, repair should only be done by official service agent.

Contact person: Mr Jason
MOB: 86-13728765409
TEL: 86-796-86780036

Skype: sxfreborn
Email: sharplumi@gmail.com
WEB: <http://www.tsongledlighting.com>